

DK210 Rhino-Rack VA, Aero, Euro & HD crossbar instruction


IDENTIFICATION CHART

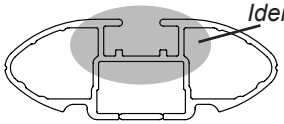


VA crossbar

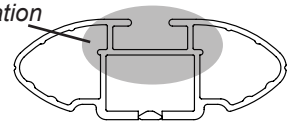





AERO crossbar



EURO crossbar



HD crossbar

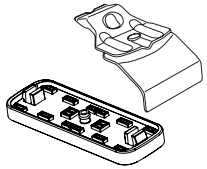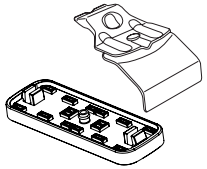			FRONT CROSSBAR						***REAR CROSSBAR***					
					***VA***	***AERO*** ***EURO***	***HD***				***VA***	***AERO*** ***EURO***	***HD***	
Vehicle	**Date**	**Crossbar**	**Front Right Pad/ Clamp**	**Front Left Pad/ Clamp**	**Measurement strip length per side**	**Measurement strip length per side**	**Measurement Distance (x)**	**Foot plate arrow direction**	**Rear Right Pad/ Clamp**	**Rear Left Pad/ Clamp**	**Measurement strip length per side**	**Measurement strip length per side**	**Measurement Distance (x)**	**Foot plate arrow direction**
Infiniti M35/ M45 4dr sedan	2005-2010	1180mm / 46,29/64”	M506 SUB0256	M505 SUB0256	207mm	152mm	982mm / 38,21/32”	OUT	M505 SUB0256	M506 SUB0256	200mm	145mm	968mm / 38,7/64”	OUT
			Arrow OUT						Arrow OUT					

DK210 Rhino-Rack VA, Aero, Euro & HD crossbar instruction

Measurement A: CENTRE of door jamb to CENTRE arrow of leg foot plate.


Measurement B: CENTRE of Front leg foot plate arrow to CENTRE of Rear leg foot plate arrow.

Carrying capacity: Roof rack is rated to 75kg. Please refer to manufacturers handbook for your vehicles maximum roof load capacity. Always use the lower of the two figures.

If your vehicle is not listed on this fitting instruction please refer to your countries Rhino-Rack web site for the latest information.


Placement of pads:

Pad M505, FRONT Left of vehicle, Arrow facing outward.
Pad M506, FRONT Right of vehicle, Arrow facing outward.
Pad M505, REAR Right of vehicle, Arrow facing outward.
Pad M506, REAR Left of vehicle, Arrow facing outward.

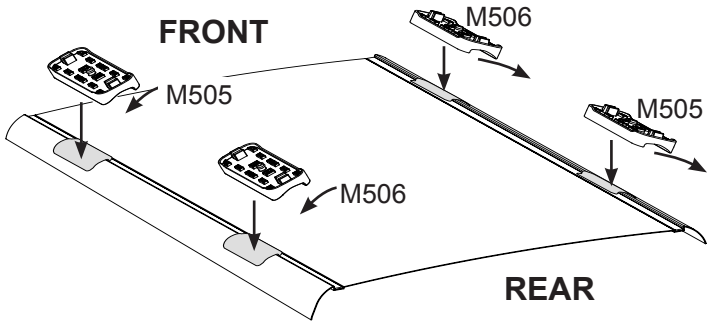


Pad orientation:


Arrows on all pads face to outside of vehicle when installed.
(*Underside of pads shown*).

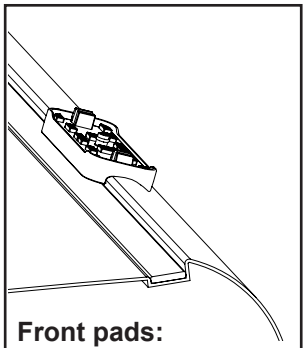


Front pads:
Front left shown M505.

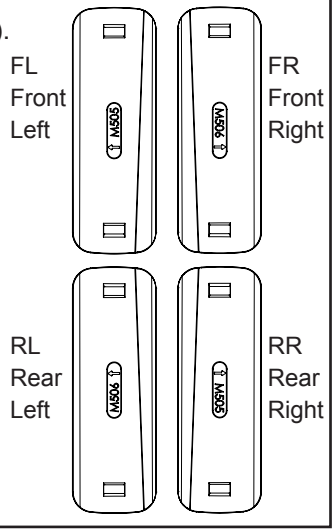

Direction of Pad, Arrow and Foot Plates

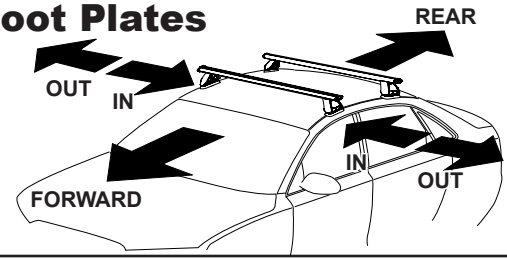

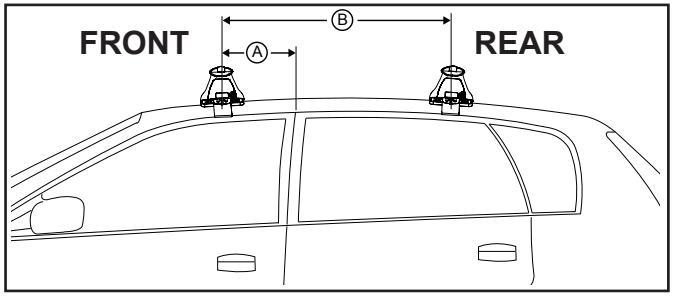

VEHICLE	Date	Measurement A	Measurement B	Load Rating (includes racks 5kg/ 11lbs)
Infiniti M35/M45 4dr sedan	2005-2010	200mm / 7,7/8”	680mm / 26,49/64”	60kg / 132lbs