



LDV DELIVER 9 LWB MID-ROOF FITTING INSTRUCTIONS

Commercial & 4WD Roof Rack Systems

Tradesman Roof Racks have made every effort to provide correct information contained within the instructions. We retain the right to alter installation specifications and instructions without notice. Always consult us for the latest installation specifications and instructions.

Please carefully read this document before fitting the roof rack.
For installation specification & instruction updates contact:
enquiries@tradesmanroofracks.com.au

© Copyright 2020 Tradesman Roof Racks.

tradesmanroofracks.com.au

INSTRUCTION 1

Below you will find the method for fitting the commercial max roof rack to your Deliver9 MWB mid-roof.

This is a nut and bolt fitment which requires drilling four 8mm bolt holes per side. Normal metal prep to drilled holes is also advisable. A natural cure silicone is to be applied to the bolt hardware to properly seal from water ingress.

The kit includes 4 mounting rails which are a mirror image to each corner, And all hardware.

On top of each rail there is an arrow for the direction of mounting.


For all corners, the arrows are to point towards the rear of the vehicle.



© Copyright 2020 Tradesman Roof Racks. Tradesman Roof Racks have made every effort to provide correct information contained within the instructions. We retain the right to alter installation specifications and instructions without notice. Always consult us for the latest installation specifications and instructions.

tradesmanroofracks.com.au

INSTRUCTION 2

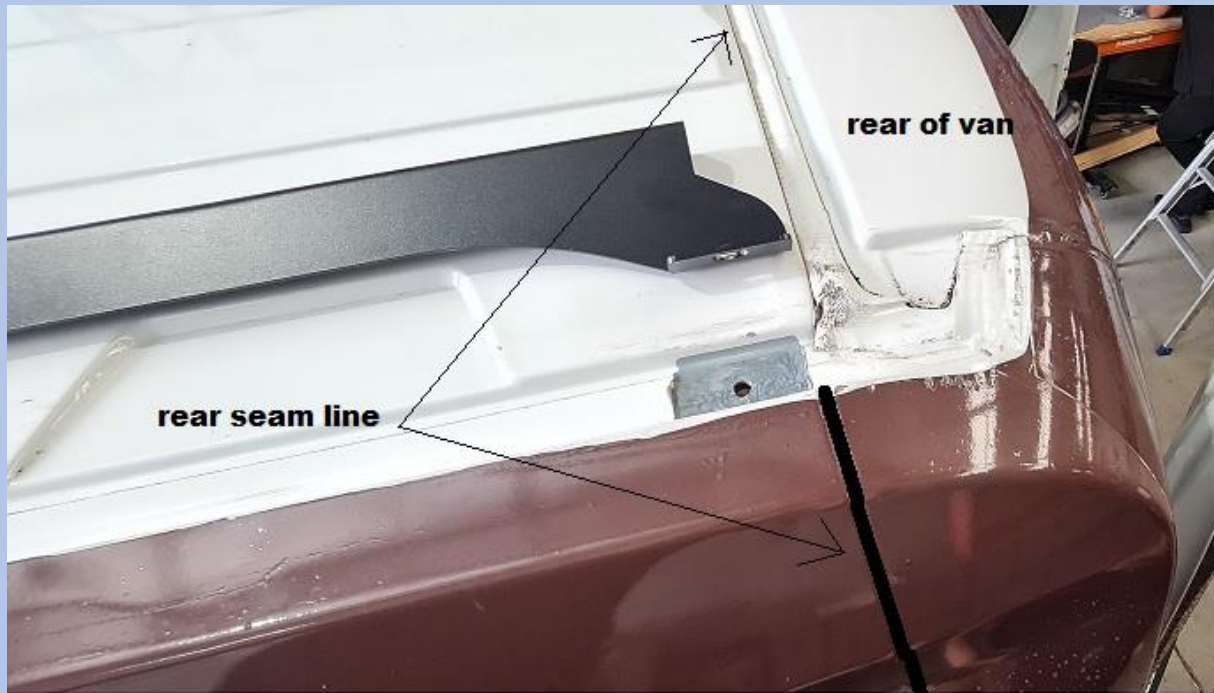

The rear body seem lines have been used to make the rail postions straight forward.

The rear seem line denotes the rear rail leg position.

The middle body seem line is used to denote the front rail rear leg position.

Remembering the arrows on the rail top should be pointing towards the rear.

Offering up the rail to the roof line and checking the top slots correspond with the 4 mounting Unistrut's within the roof rack platform.

If you measure the center to center of the mounting Unistrut's, this measurement should be the same from slot to slot across the roof line.

Slot centers should match rack to be fitted



INSTRUCTION 3

After the rails have been installed you can now fit the platform hardware, 10mm bolts and channel nuts (channel nut on top with teeth facing down) corresponding with mounting rails in roof rack for desired mounting location.

The long slot is to accommodate rollers, mounting the rack more forward.

© Copyright 2020 Tradesman Roof Racks. Tradesman Roof Racks have made every effort to provide correct information contained within the instructions. We retain the right to alter installation specifications and instructions without notice. Always consult us for the latest installation specifications and instructions.

Now lower the platform onto the mounting rails, Aligning the roof rack to the centre position and allow clearance for rollers if fitted. Now tighten, making sure the channel nuts are properly secured.

The hardware provided have spring washer but it is advisable to check tightness every 6 months. Any

questions regarding this fitment can be answered at

enquires@tradesmanroofracks.com.au

Or during business hours mon-fri 8am-5pm on 03 9722 5000



© Copyright 2020 Tradesman Roof Racks. Tradesman Roof Racks have made every effort to provide correct information contained within the instructions. We retain the right to alter installation specifications and instructions without notice. Always consult us for the latest installation specifications and instructions.