

Wedgetail Rails and Platform Fitting Instruction

To suit—LDV T60 Without Factory Rail Ducal Cab 2022-On



Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.









Contact us if any parts appear missing, incorrect, or damaged.

Clean the roof prior to fitting the roof racks.

Tools Required:

- Hex key (6 mm)
- Spanner (13 &17 mm)
- 5mm Drill Bit
- Silicone/urethane sealer
- Rivet Gun

Kit Content

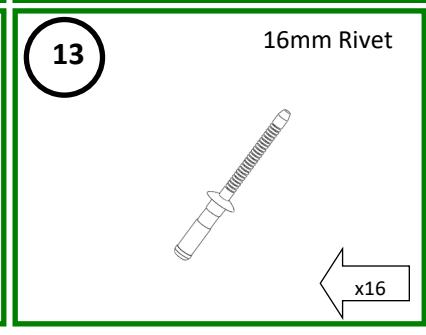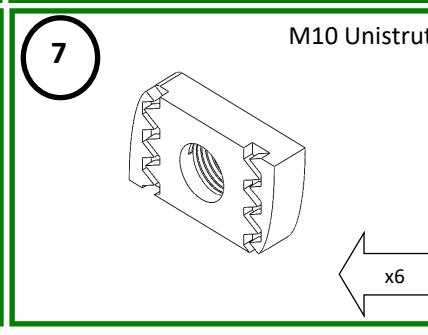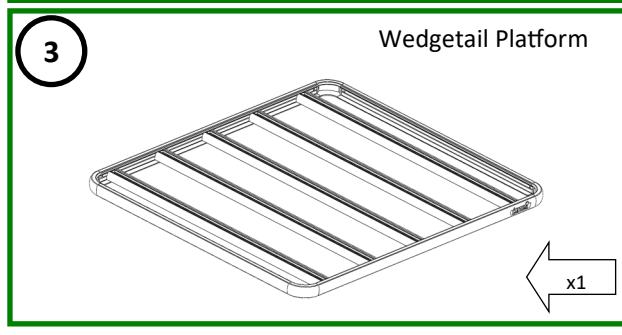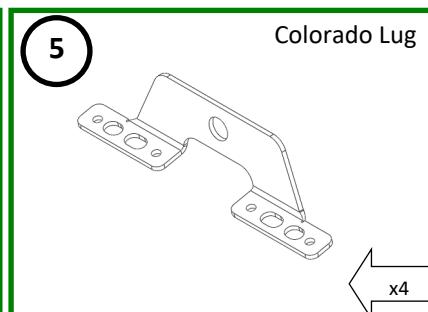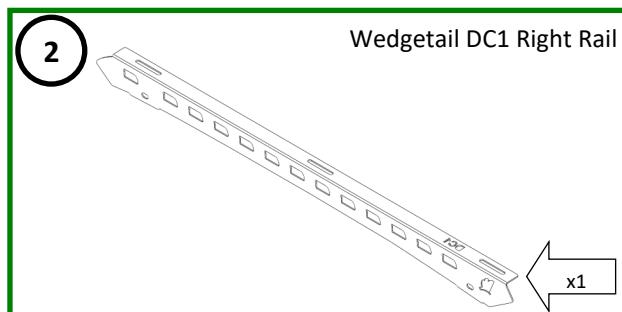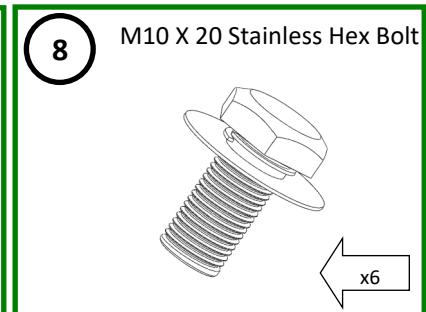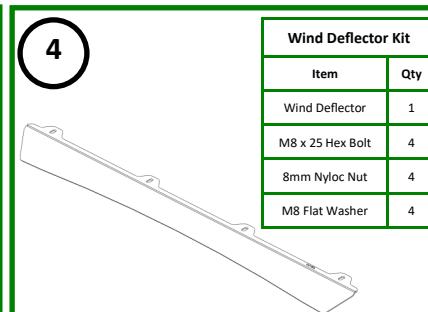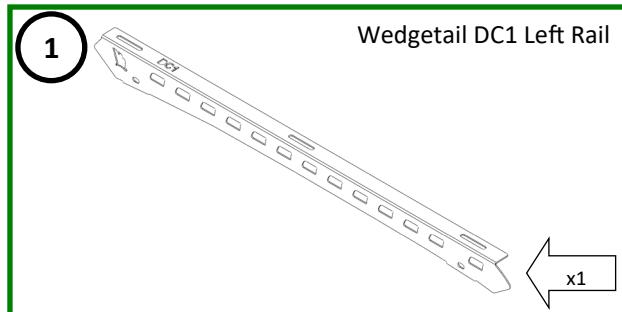

Wedgetail Rails and Platform Fitting Instruction

To suit—LDV T60 Without Factory Rail Ducab 2022-On



Assemble lugs to roof

1

- Position your Wedgetail rails in the preferred position on the roof taking into consideration vehicle aerial and desired position for light bar or wind deflector clearance as shown. Ideally take the rails lug mounting hole center to 330mm from the Wind Screen. Mark the rail mounting holes with a marker.



2


- Place mounting Lug to the marked holes. Drill all 4 mounting holes in each lug using a 5mm drill with drill stop, drilling one at a time then placing a rivet through hole to keep lined up (DO NOT RIVET IN PLACE YET).

3

- Apply silicone or urethane sealer (natural cure sealants only) to the 5mm drilled rivet holes.


4

- Attach lugs to the roof of vehicle using 5mm rivets and as shown.
- Apply silicone or urethane sealer to the top of the rivet

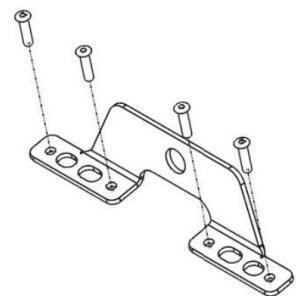

5

- Attach Rails to lugs using 10mm hardware with the wedgetail logo facing to the front of the vehicle. Refer to the picture.

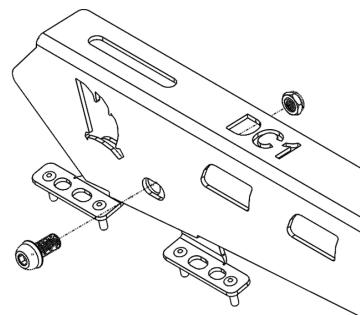

Wedgetail Rails and Platform Fitting Instruction


To suit—LDV T60 Without Factory Rail Ducab 2022-On



6

- Attach the channel nuts to the top of rail.
- Fit 10mm Bolt / Split washer/ Flat washer / Channel Nuts to the top of rail.

* Channel nuts to the top as shown in the following diagram

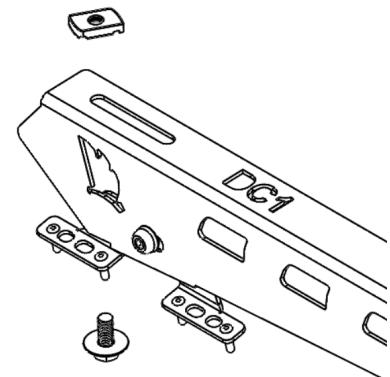

Assemble the Wedgetail Platform to the rails

7

- Place the Wedgetail Platform on the rails (Wind deflector mounting towards the front of vehicle), then spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

8

- Centralize the rack side to side (using a tape measure) on the wedgetail rails.

9

- Fully tighten remaining bolts in the following order:
 1. Rails to the lugs
 2. Rails to platform
 3. Attach wind Deflector.

NOTE-Ensure the channel nuts are 90 degrees to the channels.

Check fastenings are firmly tensioned at regular intervals.

! Do not overtighten, this will preserve the spring washers.

Fitting Note:

Where a wind deflector is used, we recommend a minimum of 15mm clearance from the vehicle roof.

Where necessary manually adjust the wind deflector or wind deflector mountings as required.

Thank you for your purchase.

Please complete your warranty application following correct installation.

Wedgetail by Tradesman Roof Racks

Innovation through Inspiration