



Congratulations on the purchase of your Australian made Wedgetail Trade Roof Rack product.







Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.

Tools Required:

- Spanner (10mm & 13mm)
- Hex Key (5 mm)

Kit Content

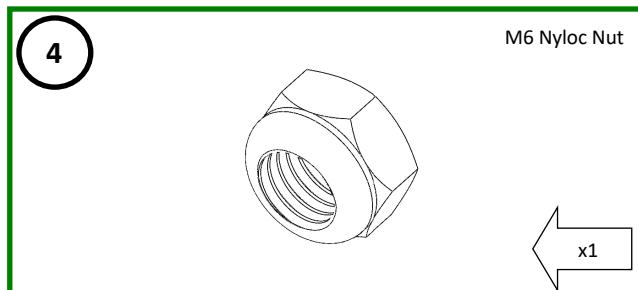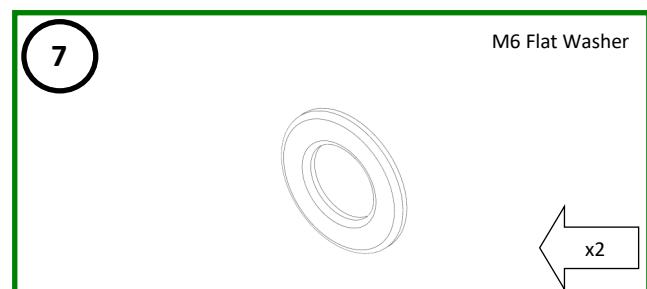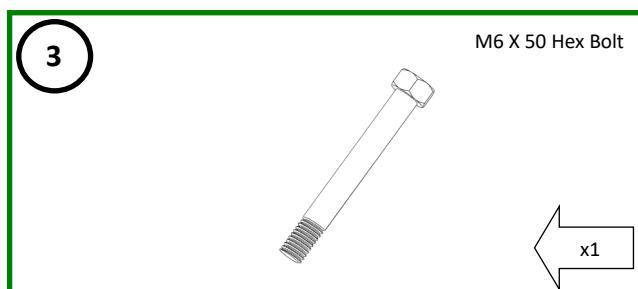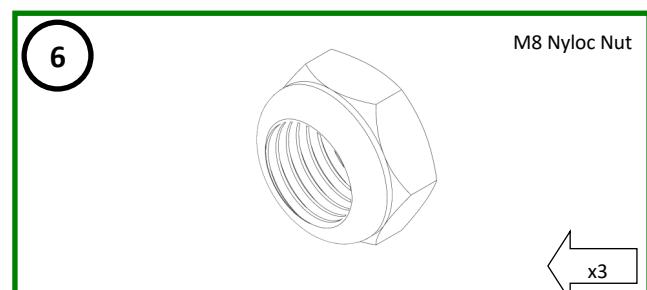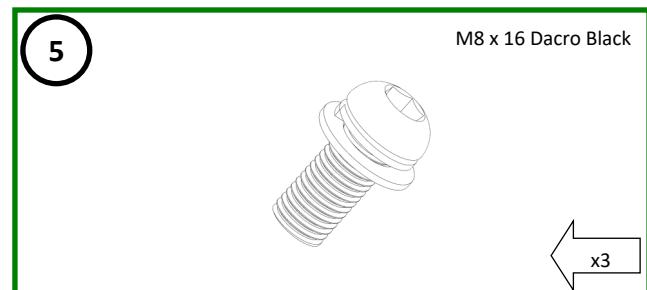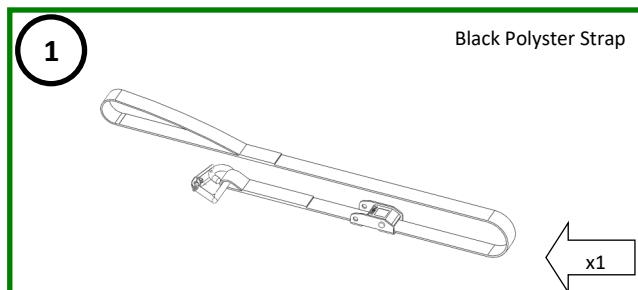




Assembly Ladder strap bracket


1

- Place the bracket to the ladder strap
- Attach the M6 bolt, nyloc nut and washer as shown

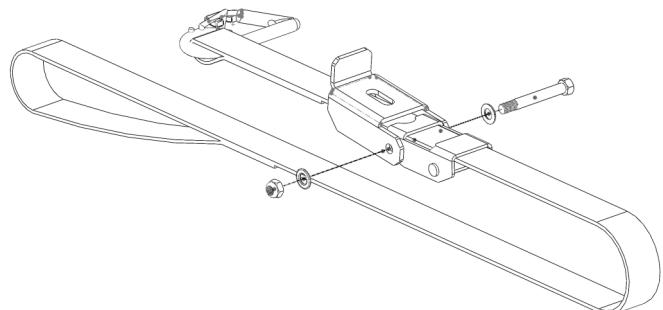



2

- Insert the M8 Nyloc Nuts to the side channel of the bottom side bar as shown.

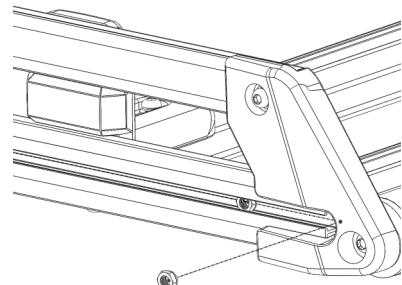

3

- Align the M8 Nyloc nut with hole of the Side Tie Down Plate & Ladder Strap Bracket
- Attach M8 bolt to the Side Tie Down Plate & Ladder Strap Bracket
- Locate the Side Tie Down Plate & Ladder Strap Bracket to the desired position
- Fully tighten the bolts

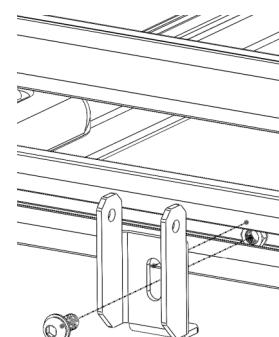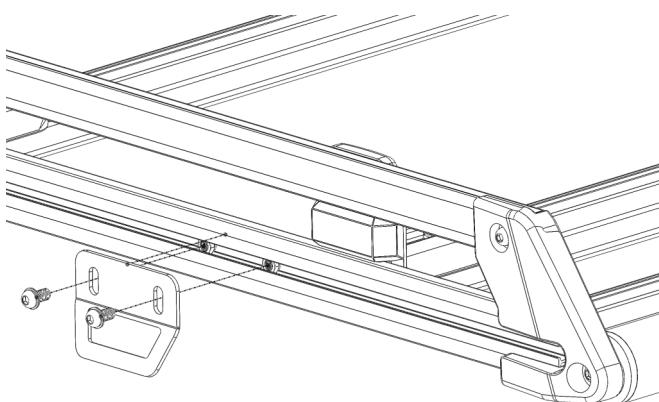

Thank you for your purchase.

Wedgetail Trade by Tradesman Roof Racks

Innovation through Inspiration