

DK177 Rhino-Rack VA, Aero, Euro & HD crossbar instruction


IDENTIFICATION CHART

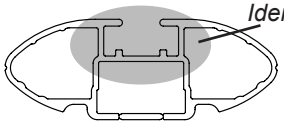


VA crossbar

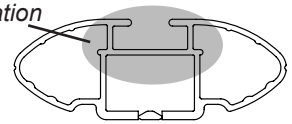





AERO crossbar



EURO crossbar



HD crossbar

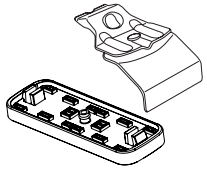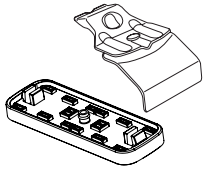			FRONT CROSSBAR						***REAR CROSSBAR***					
					***VA***	***AERO*** ***EURO***	***HD***			***VA***	***AERO*** ***EURO***	***HD***		
Vehicle	**Date**	**Crossbar**	**Front Right Pad/ Clamp**	**Front Left Pad/ Clamp**	**Measurement strip length per side**	**Measurement strip length per side**	**Measurement Distance (x)**	**Foot plate arrow direction**	**Rear Right Pad/ Clamp**	**Rear Left Pad/ Clamp**	**Measurement strip length per side**	**Measurement strip length per side**	**Measurement Distance (x)**	**Foot plate arrow direction**
Acura RDX 5dr SUV	07-12	1375mm	M366 SUB0150 Arrow FORWARD		172mm	117mm	1107mm / 43,37/64”	OUT	M367 SUB0257 Arrow FORWARD		143mm	88mm	1049mm / 41,19/64”	IN

DK177 Rhino-Rack VA, Aero, Euro & HD crossbar instruction


Measurement A: CENTRE of door jamb to CENTRE arrow of leg foot plate.

Measurement B: CENTRE of Front leg foot plate arrow to CENTRE of Rear leg foot plate arrow.


Carrying capacity: Roof rack is rated to 75kg. Please refer to manufacturers handbook for your vehicles maximum roof load capacity. Always use the lower of the two figures.

If your vehicle is not listed on this fitting instruction please refer to your countries Rhino-Rack web site for the latest information.

Acura RDX
FRONT Foot plate arrow OUT.
REAR Foot plate arrow IN.

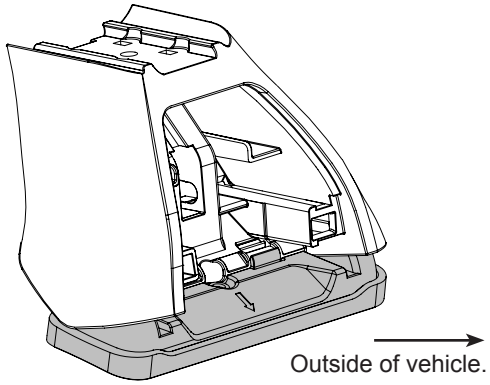



FRONT Foot Plate, Arrow OUT.

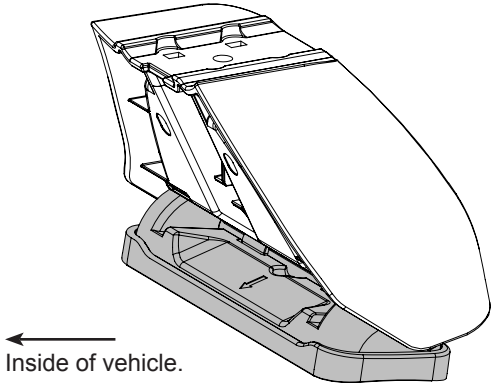

REAR Foot Plate, Arrow IN.

Direction of Pad, Arrow and Foot Plates

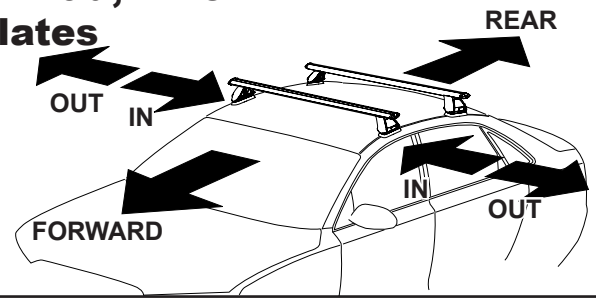

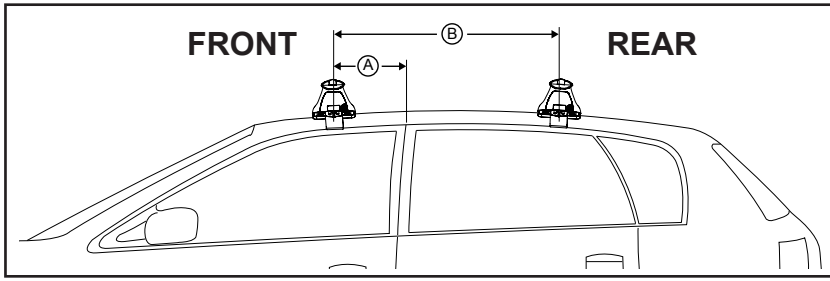

VEHICLE	Date	Measurement A	Measurement B	Load Rating (includes racks 5kg/ 11lbs)
Acura RDX 5dr SUV	07-12	250mm / 9,27/32”	650mm / 25,19/32”	50kg / 110lbs