DK184 Rhino-Rack VA, Aero, Euro & HD crossbar instruction

IDENTIFICATION CHART

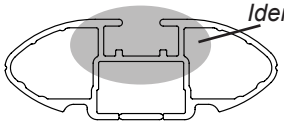

VA crossbar

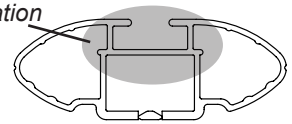

AERO crossbar



EURO crossbar



HD crossbar

			FRONT CROSSBAR						***REAR CROSSBAR***					
			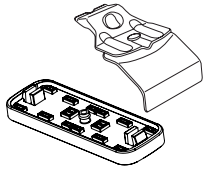		***VA***	***AERO*** ***EURO***	***HD***		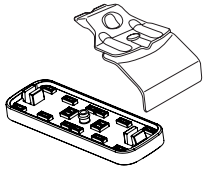	***VA***	***AERO*** ***EURO***	***HD***		
Vehicle	**Date**	**Crossbar**	**Front Right Pad/ Clamp**	**Front Left Pad/ Clamp**	**Measurement strip length per side**	**Measurement strip length per side**	**Measurement Distance (x)**	**Foot plate arrow direction**	**Rear Right Pad/ Clamp**	**Rear Left Pad/ Clamp**	**Measurement strip length per side**	**Measurement strip length per side**	**Measurement Distance (x)**	**Foot plate arrow direction**
Honda Accord 4dr Sedan	2008 on	1260mm / 49,19/32”	M415 SUB0145	M414 SUB0145	183mm	70mm	1014mm / 39,59/64”	OUT	M416 SUB0145		175mm	62mm	998mm / 39,19/64”	OUT
			Arrow OUT						Arrow OUT					

DK184 Rhino-Rack VA, Aero, Euro & HD crossbar instruction

Measurement A: CENTRE of door jamb to CENTRE arrow of leg foot plate.

Measurement B: CENTRE of Front leg foot plate arrow to CENTRE of Rear leg foot plate arrow.

Carrying capacity: Roof rack is rated to 75kg. Please refer to manufacturers handbook for your vehicles maximum roof load capacity. Always use the lower of the two figures.

If your vehicle is not listed on this fitting instruction please refer to your countries Rhino-Rack web site for the latest information.

Placement of pads:

Pad M414 - FRONT Left of vehicle, Arrow facing outward.
Pad M415 - FRONT Right of vehicle, Arrow facing outward.
Pad M416 - REAR Left & Right of vehicle, Arrow facing outward.

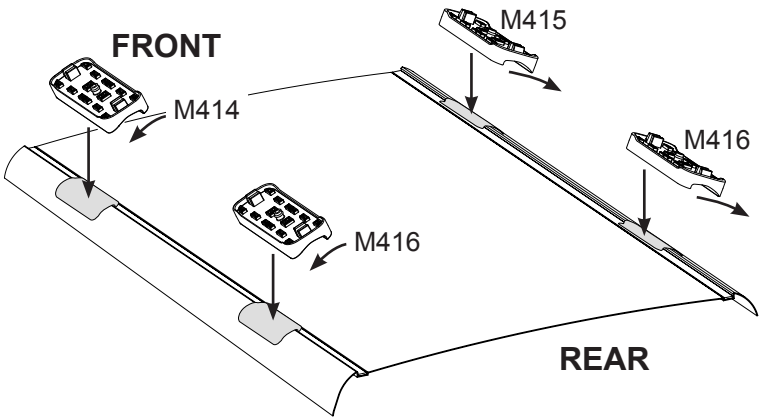

Pad orientation:

Arrows on all pads face to outside of vehicle when installed. (Underside of pads shown).

Front pads:

Front left shown.

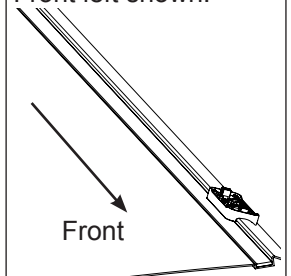

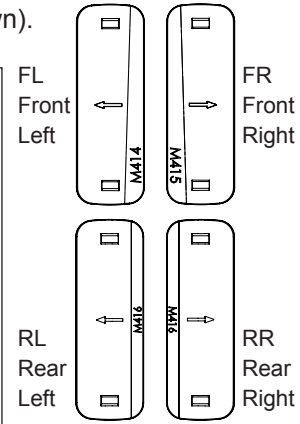

Direction of Pad, Arrow and Foot Plates

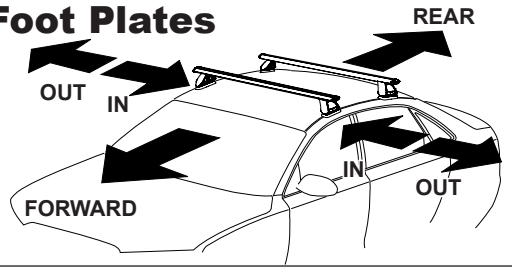

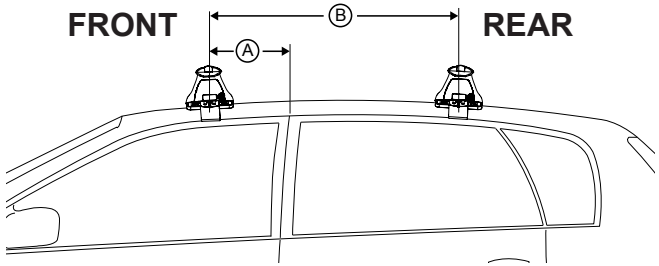

VEHICLE	Date	Measurement A	Measurement B	Load Rating (includes racks 5kg/ 11lbs)
Honda Accord 4dr Sedan	2008 on	250mm / 9,27/32”	700mm / 27,9/16”	50kg / 110lbs