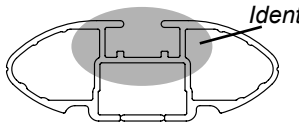
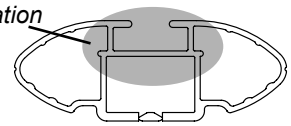
# **DK391 Rhino-Rack** VA, DA, Euro & HD crossbar instruction


***IDENTIFICATION CHART***





***VA crossbar***



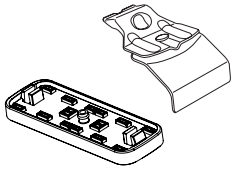

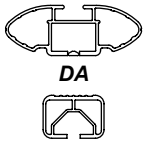

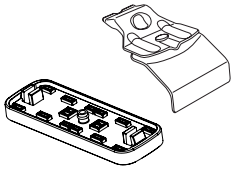

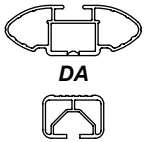

***DA crossbar***



***EURO crossbar***



***HD crossbar***

| | | | ***FRONT CROSSBAR*** | | | | | | ***REAR CROSSBAR*** | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | |  | |  ***VA*** |  ***DA*** ***EURO*** |  ***HD*** |  |  | |  ***VA*** |  ***DA*** ***EURO*** |  ***HD*** |  |
| **Vehicle** | **Date** | **Crossbar** | **Front Right Pad/ Clamp** | **Front Left Pad/ Clamp** | **Measurement strip length per side** | **Measurement strip length per side** | **Measurement Distance ( x )** | **Foot plate arrow direction** | **Rear Right Pad/ Clamp** | **Rear Left Pad/ Clamp** | **Measurement strip length per side** | **Measurement strip length per side** | **Measurement Distance ( x )** | **Foot plate arrow direction** |
| Nissan Pulsar 5dr hatch | 06/13- | 1180mm | M415 SUB0538 | M414 SUB0538 | 209mm | 154mm | 986mm / 38,13/16” | OUT | M368 SUB0369 | M368 SUB369 | 192mm | 137mm | 952mm / 37,31/64” | IN |
| | | | Pad Arrow OUT | | | | | | Pad Arrow OUT | | | | | |
| | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | |

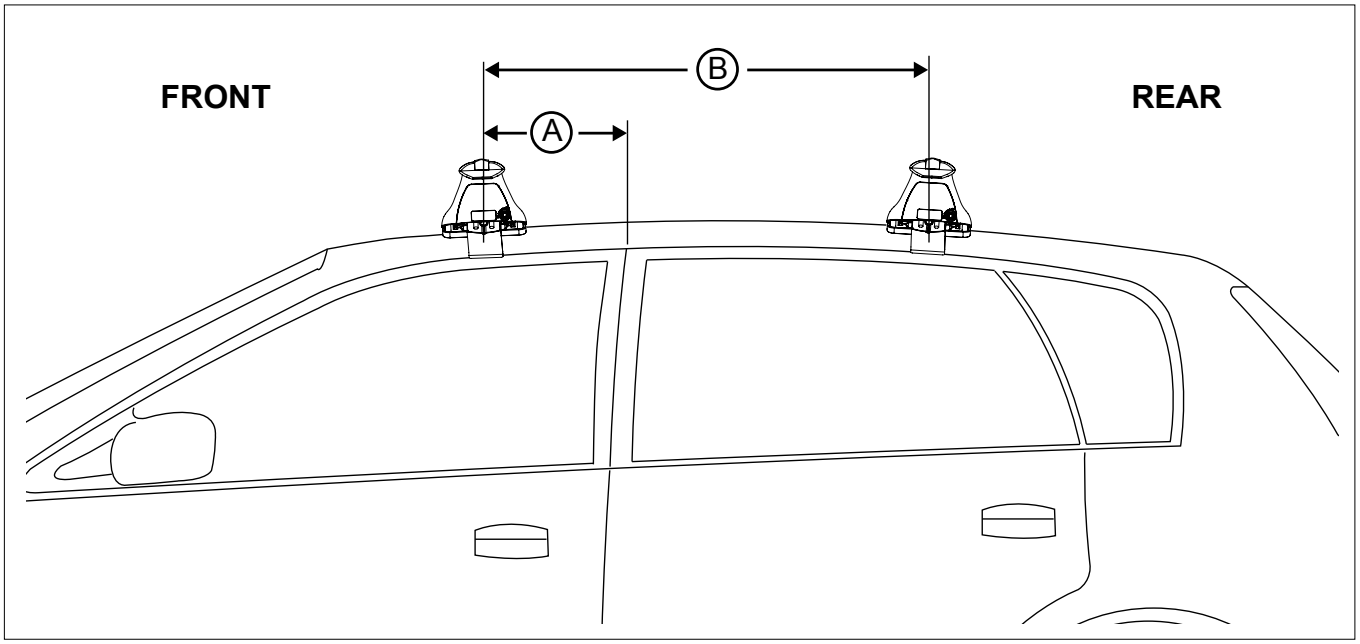
# **DK391 Rhino-Rack** VA, DA, Euro & HD crossbar instruction

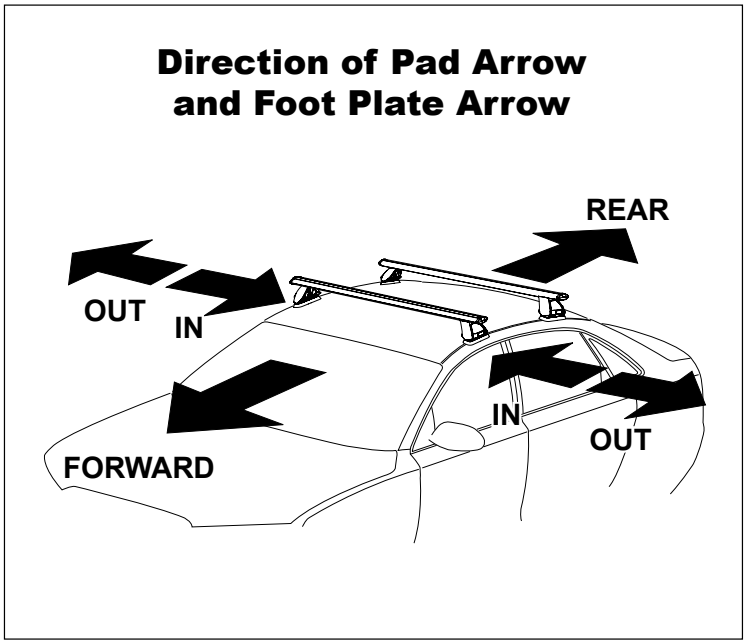
**Measurement A**: CENTRE of door jamb to CENTRE arrow of leg foot plate.

**Measurement B**: CENTRE of Front leg foot plate arrow to CENTRE of Rear leg foot plate arrow.

**Carrying capacity:** Roof rack is rated to 75kg. Please refer to manufacturers handbook for your vehicles maximum roof load capacity. Always use the lower of the two figures.

If your vehicle is not listed on this fitting instruction please refer to your countries Rhino-Rack web site for the latest information.




| VEHICLE | Date | Measurement A | Measurement B | Load Rating (includes racks 5kg/ 11lbs) |
|---|---|---|---|---|
| Nissan Pulsar 5dr hatch | 06/13- | 150mm / 5,29/32” | 700mm / 27,9/16” | 75kg / 165lbs |
| | | | | |