Rhino Rack 2500 Series - DK456 instruction

CROSSBAR IDENTIFICATION



VA crossbar



EURO crossbar



HD crossbar

			FRONT CROSSBAR						REAR CROSSBAR					
			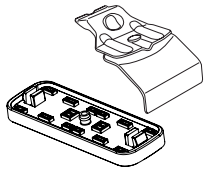		 VA	EURO	HD		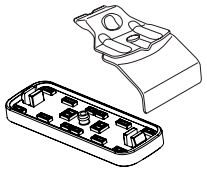		 VA	EURO	HD	
Vehicle	**Date**	**Crossbar**	**Front Right Pad/Clamp**	**Front Left Pad/Clamp**	**Measurement strip length per side**	**Measurement strip length per side**	**Measurement Distance (x)**	**Foot plate arrow direction**	**Rear Right Pad/Clamp**	**Rear Left Pad/Clamp**	**Measurement strip length per side**	**Measurement strip length per side**	**Measurement Distance (x)**	**Foot plate arrow direction**
Ford Mondeo 5dr Hatch	14-	1260mm	M415 SUB0670	M414 SUB0670	207mm	94mm	1062mm / 41,13/16”	OUT	M416 SUB0618	M416 SUB0618	195mm	82mm	1038mm / 40,7/8”	OUT
			Pad Arrow OUT						Pad Arrow OUT					

Rhino Rack 2500 Series - DK456 instruction

Measurement A: CENTRE of door jamb to CENTRE arrow of leg foot plate.

Measurement B: CENTRE of Front leg foot plate arrow to CENTRE of Rear leg foot plate arrow.

Carrying capacity: Roof rack is rated to 75kg. Please refer to manufacturers handbook for your vehicles maximum roof load capacity. Always use the lower of the two figures.

If your vehicle is not listed on this fitting instruction please refer to your countries Rhino-Rack web site for the latest information.

Direction of Pad Arrow and Foot Plate Arrow

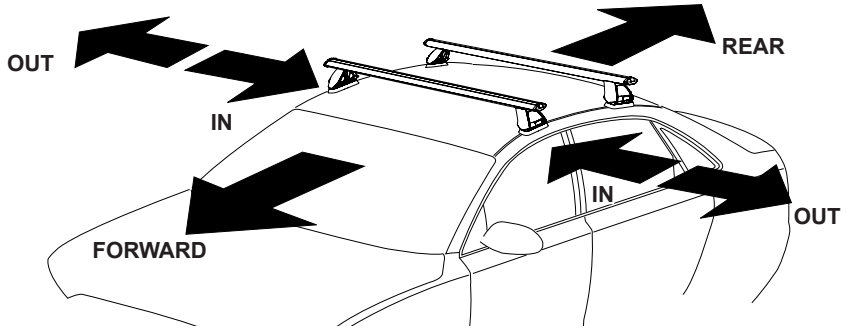

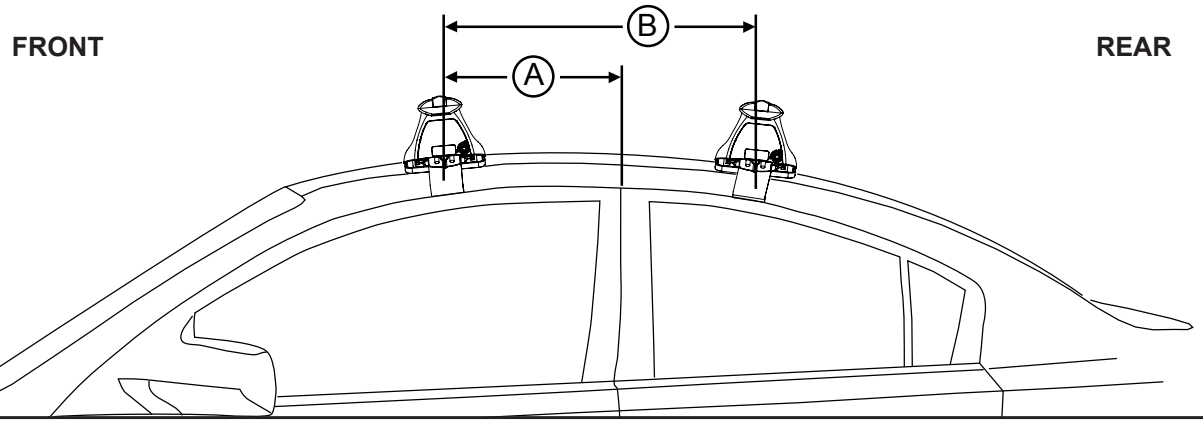

VEHICLE	Date	Measurement A	Measurement B	Load Rating (includes racks 5kg/ 11lbs)
Ford Mondeo 5dr Hatch	14-	345mm / 13,37/64”	765mm / 30,1/8”	75kg / 165lbs